

SSA3015X Plus Spectrum Analyzer

Service Manual E01A

SIGLENT TECHNOLOGIES CO.,LTD

Guaranty and Declaration

Copyright

SIGLENT TECHNOLOGIES CO., LTD All Rights Reserved.

Trademark Information

SIGLENT is the registered trademark of SIGLENT TECHNOLOGIES CO., LTD

Declaration

- **SIGLENT** products are protected by patent law worldwide
- SIGLENT reserves the right to modify or change parts of or all the specifications or pricing policies at the company's sole decision.
- Information in this publication replaces all previously corresponding material.
- Any way of copying, extracting, or translating the contents of this manual is not allowed without the permission of SIGLENT.
- SIGLENT will not be responsible for losses caused by either incidental or consequential in connection with the furnishing, use, or performance of this manual as well as any information contained.

Product Certification

SIGLENT guarantees this product conforms to the national and industrial standards in China as well as the ISO9001: 2008 standard and the ISO14001: 2004 standard. Other international standard conformance certifications are in progress.

General Safety Summary

Carefully read the following safety precautions to avoid any personal injury or damage to the instrument and any products connected to it. To avoid potential hazards, please use the instrument as specified.

Use Proper AC Power Line

Only the power cord designed for the instrument and authorized by the local country should be used.

Ground the Instrument

The instrument is grounded through the protective earth conductor of the power line. To avoid electric shock, please make sure the instrument is grounded correctly before connecting its input or output terminals.

Connect the Probe Correctly.

If a probe is used, do not connect the ground lead to high voltage since it has isobaric electric potential as the ground.

Look Over All Terminals' Ratings

To avoid fire or electric shock, please look over all ratings and sign instructions of the instrument. Before connecting the instrument, please read the manual carefully to gain more information about the ratings.

Use Proper Overvoltage Protection

Make sure that no overvoltage (such as that caused by a thunderstorm) can reach the product, or else the operator might be exposed to the danger of electrical shock.

Electrostatic Prevention

Operate the instrument in an electrostatic discharge protective area environment to avoid damages induced by static discharge. Always ground both the internal and external conductors of the cable to release static before connecting.

Maintain Proper Ventilation

Inadequate ventilation may cause an increase in the instrument's temperature, which will eventually damage the instrument. So keep well ventilated and inspect the intake and fan regularly.

Avoid Exposed Circuit or Components

Do not touch exposed contacts or components when the power is on.

Do Not Operate Without Covers

Do not operate the instrument with covers or panels removed.

Use Only the Specified Fuse.

Keep Product Surfaces Clean and Dry.

To avoid the influence of dust and/or moisture in the air, please keep the surface of the device clean and dry.

Do Not Operate in Wet Conditions.

To avoid short-circuiting to the interior of the device or electric shock, please do not operate the instrument in a humid environment.

Do Not Operate in an Explosive Atmosphere.

To avoid damage to the device or personal injury, it is important to operate the device away from an explosive atmosphere.

Safety Terms and Symbols

Terms on the product. These terms may appear on the product:

- DANGER Indicates direct injuries or hazards that may happen.
- WARNING Indicates potential injuries or hazards that may happen.
- CAUTION Indicates potential damages to the instrument or other property that may happen.

Symbols on the product. These symbols may appear on the product:







a Eart



Hazardous Voltage

Ground

Earth Chassis Ground

Contents

Guaranty and Declaration	1
General Safety Summary	2
Safety Terms and Symbols	3
General Features	
General Features	5
Prepare Information	5
Functional check	6
Power-on Inspection	6
Interface Test	
USB Host Test	
USB Device Test	
Performance Verification Test	
Absolute Amplitude accuracy Test	.14
Frequency Response Test	
Display Average Noise Level (DANL) Test	.18
TOI Test	.21
Frequency Accuracy Test	
1dB Gain Compression Test	
Second Harmonic Distortion Test	
Input Attenuation Error Test	
Tracking Generator (TG) Test	.29
Assembly Procedures	
Security Considerations	
List of Modules	.31
Required Tools	.31
Disassembly Procedures	
Removing the Rear Panel	
Removing the Front Panel	
Removing the Rear Metal Cover	
Removing the Main Board, Channel Board	
Removing the LCD, Keyboard	
Contact SIGLENT	.37

General Features

General Features

Siglent's SSA3015X Plus spectrum analyzer offers a frequency range of 9 kHz to 1.5 GHz. With their lightweight, small size, and friendly user interface, the SSA3015X Plus presents a bright easy to read display, powerful and reliable automatic measurements, and plenty of impressive features. Applications are many but include research and development, education, production, maintenance, and many more.

Table 1-1General features

Model	SPAN	RBW	Phase noise	DANL
SSA3015X Plus	9 kHz~		<-99 dBc/Hz@1 GHz,	-156
	1.5 GHz	1 Hz~1 MHz	10 kHz offset	dBm/Hz

- All-Digital IF Technology
- Frequency Range from 9 kHz to 1.5 GHz
- Up to 1.5 GHz Tracking Generator
- Modulation Analysis
- Advanced Measurement Kit
- EMI Filter and Quasi Peak Detector Kit
- 10.1-inch WVGA(1024x600) Display, Multi-Touch Screen
- Remote Control via internal Web Browser as well as EasySpectrum, a Windows compatible software tool

Prepare Information

Before initiating performance verification or any adjustments, it is recommended to follow these procedures. The following topics are discussed in this chapter.

- How to perform functional checks
- How to operate four standard interface tests
- How to use the self-calibration routine
- How to recall factory Default settings

For more detailed information about the operation of the analyzer, please refer to the SSA3000X Plus User Manual.

Functional check

There are three types of checks used to determine if the spectrum analyzer is operating properly.

Power-on Inspection

The normal operating voltage for the SSA3015X Plus spectrum analyzer is in the range of 100-240 VRMS, 50 Hz/ 60 Hz/ 440 Hz.

Please use the power cord provided as accessories to connect the instrument to the power source as shown in the figure below.

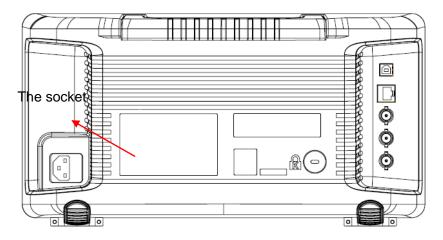


Figure 1-1 Connect the power cord

Note: To avoid electric shock, make sure that the instrument is correctly grounded to the earth before connecting AC power.

Press the power-on button located at the lower-left corner of the front panel and some keys will illuminate for about 6 seconds. Then, the boot screen will appear on the display.

The front panel is shown in the figure below.



Figure 1-2 Front Panel



Figure 1-3 Rear Panel

Interface Test

The SSA3015X Plus spectrum analyzer is designed with four standard

interfaces: USB Host, USB Device, LAN, and Earphone. Being connected to other instruments via these interfaces enables the analyzer to achieve even more enhanced capabilities. To ensure the analyzer is operating properly, it is recommended to first test the interfaces.

USB Host Test

To test if the USB Host interface is working normally.

Tools:

• USB memory device (U disk)

Steps:

- 1. Insert a U disk into the USB Host interface on the front panel of the spectrum analyzer.
- 2. An icon shaped like a U disk appears on the upper right of the screen, as shown in the figure below. The icon appearance indicates the U disk has been successfully recognized.

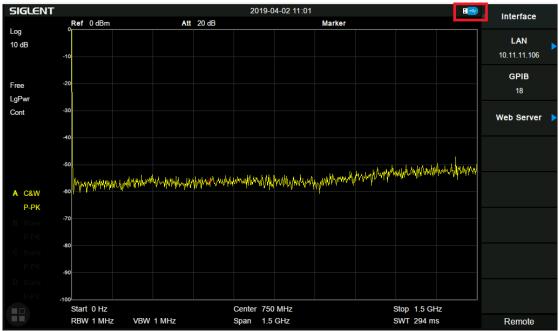


Figure 2-1 USB drive has been properly recognized

USB Device Test


To test if the USB Device interface works normally.

Tools:

- A computer with a USB interface that is compatible with running National Instruments NI-MAX software
- A standard USB cable (Type A-B)
- NI-MAX software

Steps:

- 1. Download and install National Instruments NI MAX software by following the installation instructions provided by National Instruments.
- 2. Connect the analyzer USB Device port and the computer using a USB cable.
- Run NI MAX software. Click "Device and interface" at the upper left corner of the NI software interface and immediately display the "USBTMC" device symbol.

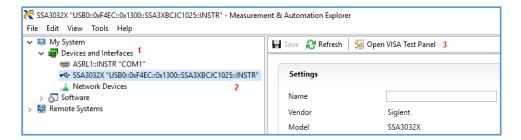

4. Click the "Open VISA Test Panel" option button, and then the following The interface will appear. Then click the "Input/Output" option button and click the "Query" option button to view the Read operation information.

USB0::0xF4EC::0x1300::SSA3XBCJC1025::INSTR - VISA Test	t Panel			-		×
Configuration Input/Output	Advanced	NI I/O Trace	Help	V	NATION. NSTRUM	AL IENTS
Basic I/O Line Control USB Control Select or Enter Command *IDN?\n *IDN?\n Write Query Read View mi 1: Write Operation (*IDN?\n) Return Count: 6 bytes 2: Read Operation 4 Return Count: 52 bytes 5 Siglent\sTechnologies, SSA3032X, SSA3XECJO	Read Status Byte ixed ASCII/hexadecimal C1025, 1.2.8.2\n Copy to Clipboard	Bytes to Read 1024 👻 Clear	Return Data Read Opera No Error			

LAN Port Test

Use to test the LAN interface functionality.

Tools:

- A computer with a functional LAN interface
- A standard LAN cable

Steps:

- 1. Connect the spectrum analyzer and the computer using a LAN cable via the LAN interface.
- 2. Press **System** -> **Interface** ->**LAN**, Set IP Config to DHCP, as the figure below shows. The analyzer will set IP Address and Subnet Mask and Gateway automatically in this network.

Write down the displayed IP address. It will be used in later steps.

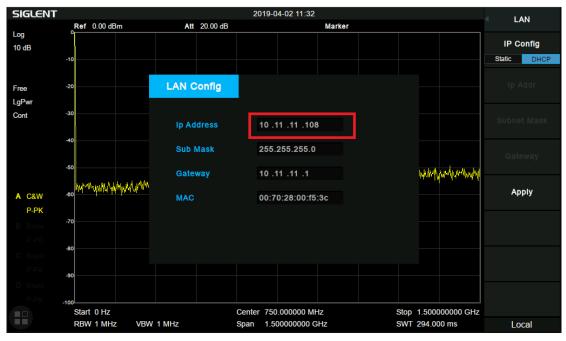


Figure 2-2 IP configuration interface

3. Run NI max software. Click "Device and interfaces" at the upper left corner of the NI software interface, select "Network Devices", Add Network Device, and select VISA TCP/IP Resource as shown:

Retwork Devices - Measurement & Automation Explorer	
File Edit View Tools Help	
🗸 📮 My System	🖄 Add Network Device 🔻
Devices and Interfaces	S VISA TCP/IP Resource Hostr
COM3"	aa Histitetyii Hestareenii Hosti
Network Devices	
> 🔂 Software	
> 🔛 Remote Systems	

4. Select Manual Entry of LAN instrument, select Next, and enter the IP address as shown. Click Finish to establish the connection:

NOTE: Leave the LAN Device Name BLANK or the connection will fail.



4. After a brief scan, the connection should be shown under Network Devices:

🖉 🔜 My System	擑 Add Networ	k Device 🔻			
✓ ₩ Devices and Interfaces	Drockust	N1		10 A 11	Curici Numb
SARL10::INSTR "LPT1" SARL10::INSTR "LPT1" SARL10::INSTR "LPT1" SARL10::INSTR" SARJ032X "TCPIP0::192.168.55.109::inst0::INSTR" Software Remote Systems	යි SSA3032X	TCPIP0::192.168	192.168.55.109	192.168.55.109	SSA30XC315

5. Right-click on the product and select Open NI-VISA Test Panel:

Retwork Devices - Measurement & Automation Explorer File Edit View Tools Help		
✓ ➡ My System ✓ ∰ Devices and Interfaces	Ž Add Network Device ▼	
	Product Name Hostname IP Address Serial Nu SSA3032X TCPIF 192.168 192.168.55.109 SSA30XC Rename Delete Open VISA Test Panel 192.168.55.109 SSA30XC	

- 6. Click the "Input/Output" option button and click the "Query" option button. If everything is correct, you will see the Read operation information returned as shown below.
 - **NOTE:** The *IDN? command (known as the Identification Query) should return the instrument manufacturer, instrument model, serial number, and other identification information.

🔀 TCPIP0::10.11.11.240::inst0::INSTR - VISA Test Panel				– 🗆 ×
Configuration Input/Output	Advanced	NI I/O Trace	Help	
Basic I/O Select or Enter Command "IDN7\n "IDN7\n Write Query Read View 1: Write Operation (*IDN7\n) Return Count: 6 bytes 2: Read Operation Return Count: 5 bytes Siglent\sTechnologies, SSA3032X, SSA3XI	Read Status Byte w mixed ASCII/hexadecimal BCJC1025, 1.2.8.2\n Copy to Clipboard	Bytes to Read 1024 • Clear	Return Data Read Opera No Error	

Performance Verification Test

This chapter explains testing the spectrum analyzer to verify performance specifications. For accurate test results, please let the test equipment and the analyzer warm-up 30 minutes before testing.

Here is the required equipment:

Equipment Specification		Qty.	Recommended
RF Generator	9 kHz~3.2 GHz	2	R&S SMB100A
Signal Generator	100M	1	SIGLENT SDG1050
Power Meter	6 GHz	1	R&S NRP-Z91
Frequency Counter 10 MHz		1	SIGLENT SDG1050 With OCXO
Low-pass Filter	Cut-off 50 MHz	1	
Power divider 6 GHz		1	Mini
SMA-N Cable	SMA-N Cable 6 GHz		
N-N Cable	N-N Cable 6 GHz		
BNC Cable	2 GHz	2	
BNC-SMA Cable	2GHz	1	

Table 3-1 Test equipment

Absolute Amplitude accuracy Test

Specification

Absolute amplitude accuracy	Preamp off	±0.4 dB, input signal -20 dBm
	Preamp on	±0.6 dB, input signal -40 dBm
20 °C to 30 °C, fc = 50 MHz,	RBW = 1 kH	z, VBW = 1 kHz, peak detector,

attenuation = 20 dB

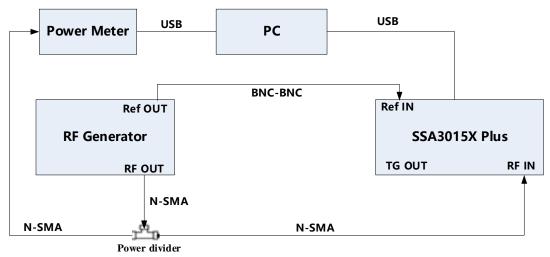


Figure 3-1 Absolute amplitude accuracy connections

Steps:

- 1. Connect the spectrum analyzer, signal generator, and power meter as in figure 3-1
- 2. Set the signal generator to output a sine waveform with 50 MHz frequency and -20 dBm amplitude and enable the output
- 3. Configure the spectrum analyzer:
 - (a) Set the center frequency to 50 MHz
 - (b) Set the span to 1 MHz
 - (c) Set the attenuation to 20 dB
 - (d) Set the RBW and VBW to 1 kHz
 - (e) Press Trace -> set Avg Times to 10, wait for trace average
- 4. Record measurement value P1 of the power meter
- 5. Press Peak to find the maximum value of the spectrum analyzer and record the result P2
- 6. Absolute amplitude accuracy = P1 P2
- 7. Change the preamplifier on and set the output amplitude of the signal generator to -40dBm. Repeat steps 3 to 6 and record the results.


Preamp off			
Frequency	P1 (Power Meter)	P2 (Spectrum Analyzer)	P1- P2
50 MHz			
Preamp on			
Frequency	P1 (Power Meter)	P2 (Spectrum Analyzer)	P1- P2
50 MHz			

Frequency Response Test

Specification

Preamp off	±0.8 dB	±0.4 dB, typ.
Preamp on	±1.2 dB	±0.6 dB, typ.

20 °C to 30 °C , attenuation = 20 dB, reference frequency 50 MHz

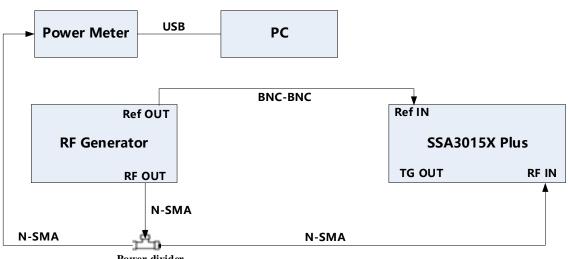

Power divider

Figure 3-2 Frequency response connections

Steps:

- 1. Connect the spectrum analyzer, signal generator, and power meter as figure 3-2 shows
- 2. Set the signal generator to output a sine waveform with 50 MHz frequency and -20 dBm amplitude and enable output
- 3. Read the measurement of the power meter record the result as reference value P1
- 4. Configure the spectrum analyzer:
 - (a) Set the center frequency to 50 MHz
 - (b) Set the span to 1 MHz
 - (c) Set the attenuation to 20 dB
 - (d) Press Peak to find the maximum value and record as reference value P2
- 5. Modify the output frequency of the signal generator at 100 kHz, 1 MHz, 10 MHz, 100 MHz, 1 GHz, 1.5 GHz
- 6. Read the measurement of the power meter record the result as A1, SYSTEM ERROR = A1 P1
- 7. Modify the center frequency of the spectrum analyzer so that it matches the signal generator and find the peak value A2, calculate the GLOBAL

ERROR = A2 - P2

- 8. Frequency response = |GLOBAL ERROR SYSTEM ERROR|, compare the calculated result with the specification
- 9. Enable the preamplifier and set the output amplitude of the signal generator to -40dBm. Repeat steps 3 to 8 and record the results.

Record:						
Preamp off						
Frequency	P1 (PM)	P2 (SA)				
50 MHz						
Frequency	A1(PM)	A2(SA)	A1 – P1 (System Error)	A2 – P2 (Global Error)	Frequency Response	Pass/Fail
100 kHz						
1 MHz						
10 MHz						
100MHz						
1 GHz						
1.5GHz						

Preamp on						
Frequency	P1 (PM)	P2 (SA)				
50 MHz						
Frequency	A1(PM)	A2(SA)	A1 – P1	A2 – P2	Frequency	Pass/Fail
			(System	(Global	Response	
			Error)	Error)		
100 kHz						
1 MHz						
10 MHz						
100MHz						
1 GHz						
1.5 GHz						

Display Average Noise Level (DANL) Test

Specification

•	Frequency	RBW=1 Hz		
	100 kHz ~1 MHz	-100 dBm, -102 dBm (typ.)		
Broomp Off	1 MHz~10 MHz	-124 dBm, -130 dBm (typ.)		
Preamp Off	10 MHz~200 MHz	-128 dBm, -134 dBm (typ.)		
	200 MHz~1.5 GHz	-121 dBm, -127 dBm (typ.)		
	100 kHz ~1 MHz	-120 dBm, -122 dBm (typ.)		
Draamp Op	1 MHz~10 MHz	-147 dBm, -152 dBm (typ.)		
Preamp On	10 MHz~200 MHz	-150 dBm, -156 dBm (typ.)		
	200 MHz~1.5 GHz	-142 dBm, -148 dBm (typ.)		
00 °C to 00 °C attenuetien 0 dB comple datastan trace success 50				

20 °C to 30 °C, attenuation = 0 dB, sample detector, trace average >50



Figure 3-3 DANL verification connections

Step:

- 1. Connect a 50Ω load to the RF IN port of spectrum analyzer as the figure shows
- 2. Configure the spectrum analyzer:
 - (a) Set the start frequency to 100 kHz and the stop frequency to 1MHz
 - (b) Set the RBW to 10Hz and VBW to 1Hz
 - (c) Set the detect type to Sample
- 3. Press Trace -> Avg Times and wait for trace average
- 4. Press Peak to find the maximum noise level of this frequency range, record the marker value N
- 5. Change the frequency range according to the specification table and set the RBW to a suitable value, repeat steps 2 to 5, and test other frequency ranges.

	Frequency	RBW=1 Hz	Amplitude	Pass/Fail
Preamp	500.5 kHz	-100 dBm, -102 dBm (typ.)		

Off	5.005 MHz	-124 dBm, -130 dBm (typ.)
	50.005 MHz	-128 dBm, -134 dBm (typ.)
	500.005 MHz	-121 dBm, -127 dBm (typ.)
	500.5 kHz	-120 dBm, -122 dBm (typ.)
Preamp	5.005 MHz	-147 dBm, -152 dBm (typ.)
On	50.005 MHz	-150 dBm, -156 dBm (typ.)
	500.005 MHz	-142 dBm, -148 dBm (typ.)

Phase Noise Test

Specification

	<-95 dBc/Hz @10 kHz offset, <-99 dBc/Hz (typ.)		
Phase noise	<-96 dBc/Hz @100 kHz offset,<-98 dBc/Hz (typ.)		
	<-115 dBc/Hz @1 MHz offset, <-120 dBc/Hz (typ.)		
20 °C to 20 °C of			

20 °C to 30 °C , attenuation = 0 dB, fc = 1 GHz

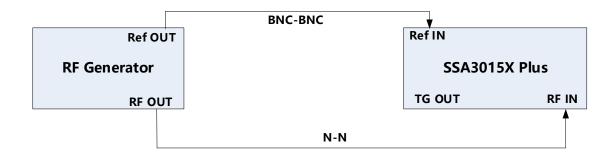


Figure 3-4 Phase noise verification connections

Step:


- 1. Connect the signal generator and spectrum analyzer as figure 3-4 shows
- 2. Configure the spectrum analyzer:
 - (a) Set the center frequency to 1 GHz
 - (b) Set the span to 50 kHz
 - (c) Set the RBW to 100 Hz
 - (d) Set the attenuation = 0 dB
 - (e) Set the detect type to Sample
- 3. Set the signal generator to output a sine waveform with 1000 MHz frequency and -20 dBm amplitude and enable the output
- 4. Press Trace -> avg Times 100 and wait for trace average
- 5. Press peak to find the maximum value, record the peak value P1
- Change marker type to delta and input 10kHz, press Marker Fn -> Noise Marker, record the marker value P2
- 7. Phase noise = P2 P1, compare the calculated result with specification

Recordi				
Offset @1 GHz	P1	P2	P2 - P1	Pass/Fail
10 kHz				
100 kHz				
1 MHz				

TOI Test

Specification

IIP3	+10 dBm			
fc≥50 MHz, two -20 dBm tones at input mixer spaced by 100 kHz, attenuation				
= 0 dB, preamp off, 20 °C to 30 °C				

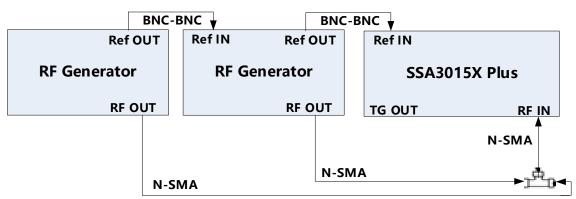

Power divider

Figure 3-5 TOI verification connections

Step

- 1. Connect double signal generators to a power divider and the output of the divider to RF IN port of spectrum analyzer
- 2. Configure the spectrum analyzer:
 - (a) Set the center frequency to 1 GHz
 - (b) Set the span to 1 MHz
 - (c) Set the RBW to 10 kHz
 - (d) Set the attenuation = 0 dB
- 3. Set the signal generator A to output a sine waveform with 1000 MHz frequency and -20 dBm amplitude and enable output
- 4. Set the signal generator B to output a sine waveform with 1000.1 MHz frequency and -20 dBm amplitude and enable output
- 5. Press Trace -> avg Times 100, and wait for trace average
- 6. Press Peak to find the maximum value, then change the marker type to delta and press Next Peak twice, record delta amplitude value DELTA
- 7. IIP3 = -20dBm DELTA/2, check if the calculate result \geq +10 dB

INCCOLU.			
Offset	DELTA	IIP3	Pass/Fail
999.9 MHz			
1000.2 MHz			

Frequency Accuracy Test

Specification

Reference frequency	10.000000 MHz
Initial calibration accuracy	<1 ppm

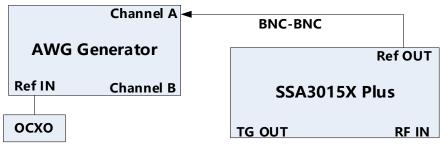


Figure 3-6 Connecting test instruments for frequency accuracy


Steps:

- 1. Connect ref out port of the spectrum analyzer to the channel A of the SDG1050, which is referenced by an OCXO
- 2. Set the SDG1050 to frequency counter mode, and set frequency ref to 10.000000 MHz
- 3. Check if the frequency deviation \leq 1 ppm

Frequency	Frequency Deviation	Pass/Fail
10.000000 MHz		

1dB Gain Compression Test

Specification

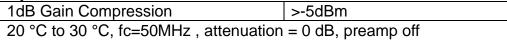

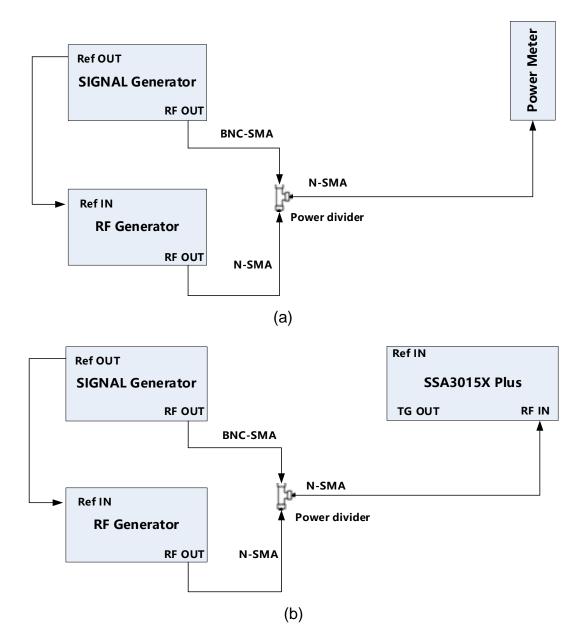


Figure 3-7 connecting test instruments for 1dB Gain Compression Test

Steps:

- 1. Connect the signal generator, RF generator, and power meter as figure 3-7(a) shows
- Set the output frequency of the signal generator to 50 MHz and the amplitude to -25 dBm. Set the output frequency of the RF generator to 53 MHz and the amplitude to -5 dBm.

- 3. Enable the output of the signal generator and disable the output of the RF generator. Observe the measurement value of the power meter. Adjust the output amplitude of the signal generator until the reading of the power meter becomes -25 dBm.
- 4. Enable the output of the RF generator and disable the output of the signal generator. Observe the measurement value of the power meter. Adjust the output amplitude of the RF generator until the reading of the power meter becomes -5 dBm.
- 5. Disconnect the power divider and power meter and connect the power divider with the spectrum analyzer, as shown in Figure 3-7(b).
- 6. Enable the output of the signal generator and disable the output of the RF generator.
- 7. Configure the spectrum analyzer:
 - a) Set the center frequency to 50 MHz.b) Set the span to 100 kHz.
 - b) Set the reference level to 2°
 - c) Set the reference level to -25 dBm.
 - d) Set the input attenuation to 0 dB.
 - e) Set the resolution bandwidth to 1 kHz.
 - f) Set the sweep time to auto and the auto sweep time to accuracy.
- 8. Press Peak to find the maximum value and record it as reference value P1.
- 9. Enable the output of the signal generator and the output of the RF generator, find the peak value P2.

P1	P2	P1 – P2

Second Harmonic Distortion Test

Specification

Second Harmonic Distortion Test	<-65dBc
20 °C to 30 °C, fc=50MHz , atte	nuation = 0 dB, preamp off, mixer
level=-30dBm	

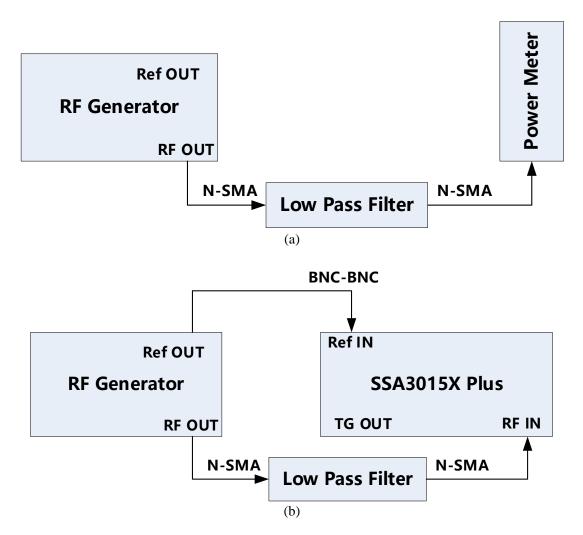


Figure 3-8 connecting test instruments for Second Harmonic Distortion Test

Steps:

- 1. Connect the RF generator, 50MHz low pass filter, and power meter as figure 3-8(a) shows
- Set the output frequency of the RF generator to 50 MHz and the amplitude to -30 dBm. Observe the measurement value of the power meter. Adjust the output amplitude of the RF generator until the reading of the power meter becomes -30 dBm.
- 3. Connect the RF generator, 50MHz low pass filter, and spectrum analyzer

as figure 3-8(b) shows. Enable the output of the RF generator.


- 4. Configure the spectrum analyzer:
 - a) Set the center frequency to 50 MHz.
 - b) Set the span to 10 kHz.
 - d) Set the reference level to -30 dBm.
 - e) Set the input attenuation to 0 dB.
 - f) Set the resolution bandwidth to 300 Hz.
 - g) Set the video bandwidth to 10 Hz.
 - h) Set the sweep time to auto and the auto sweep time to accuracy.
- 5. Press Peak to find the maximum value P1. Then, set the center frequency to 100 MHz, Press Peak to find the maximum value P2.

P1	P2	P1 – P2

Input Attenuation Error Test

Specification

Input Attenuation Error Test	<±0.5dB
20 °C to 30 °C, fc=50MHz , preamp off,	mixer level=-30dBm

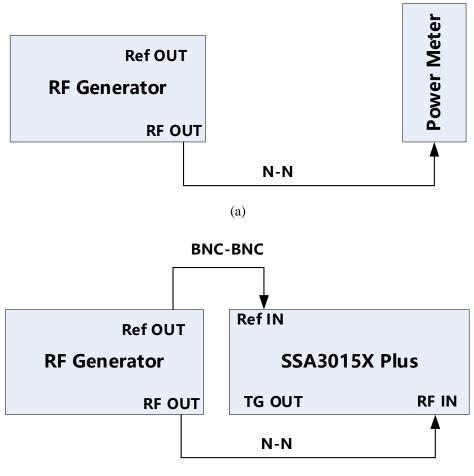

(b)

Figure 3-9 connecting test instruments for Input Attenuation Error Test

Steps:

- 1. Connect the RF generator and power meter as figure 3-9(a) shows
- Set the output frequency of the RF generator to 50 MHz and the amplitude to -30 dBm. Observe the measurement value of the power meter. Adjust the output amplitude of the RF generator until the reading of the power meter becomes -30 dBm. Read the output amplitude from the RF generator, record it as P₋₃₀.
- 3. Adjust the output amplitude of RF generator until the reading of the power meter becomes -25, -20, -15, -10, -5, 0 dBm respectively. Record these values as P₋₂₅, P₋₂₀, P₋₁₅, P₋₁₀, P₋₅, P₀.

SIGLENT

- 4. Connect the RF generator and spectrum analyzer as figure 3-2(b) shows
- 5. Set the output frequency of the RF generator to 50 MHz and the amplitude to P_{-10} .
- 6. Configure the spectrum analyzer:
 a) Set the center frequency to 50 MHz.
 b) Set the span to 10 kHz.
 c) Set the reference level to 0 dBm.
 d) Set the input attenuation to 20 dB.
 - e) Set the resolution bandwidth to 1 kHz and the video bandwidth to 10 Hz.
 - f) Set the sweep time to auto and the auto sweep time to accuracy.
- 7. Press Peak to find the maximum value P(ATT=20dB). Record $\Delta P(ATT=20dB)=P(ATT=20dB)+10dBm$ as reference value.
- Change the output amplitude of the RF generator to P-30. Set the input attenuation of the spectrum analyzer to 0dB. Press Peak to find the maximum value P(ATT=0dB).Record ΔP(ATT=0dB)=P(ATT=0dB)+30dBm.
- 9. Repeat step 8, record the value

 $\Delta P(ATT=5dB)=P(ATT=5dB)+25dBm, \\ \Delta P(ATT=10dB)=P(ATT=10dB)+20dBm, \\ \Delta P(ATT=15dB)=P(ATT=15dB)+15dBm, \\ \Delta P(ATT=25dB)=P(ATT=25dB)+5dBm, \\ \Delta P(ATT=30dB)=P(ATT=30dB).$

Error(ATT=0dB)= $\Delta P(ATT=0dB)$ - $\Delta P(ATT=20dB)$, Error(ATT=5dB)= $\Delta P(ATT=5dB)$ - $\Delta P(ATT=20dB)$, Error(ATT=10dB)= $\Delta P(ATT=10dB)$ - $\Delta P(ATT=20dB)$, Error(ATT=15dB)= $\Delta P(ATT=15dB)$ - $\Delta P(ATT=20dB)$, Error(ATT=25dB)= $\Delta P(ATT=25dB)$ - $\Delta P(ATT=20dB)$, Error(ATT=30dB)= $\Delta P(ATT=30dB)$ - $\Delta P(ATT=20dB)$.

	P _{0~-30}	ATT	ΔP(ATT=0~30dB)	Error
P-30		0		
P-25		5		
P-20		10		
P-15		15		
P-10		20		
P-5		25		
P ₀		30		

Tracking Generator (TG) Test

Specification

Frequency range	100 kHz ~1.5 GHz
Output level	-20 dBm ~ 0 dBm
Output flatness	+/-3 dB

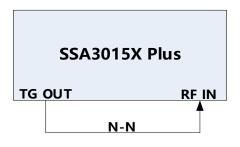


Figure 3-10 Connecting test instruments for TG Output

Steps:

- 1. Connect RF IN port and TG OUT port by an N-N cable as figure 3-10 shows
- 2. Configure the spectrum analyzer:
 - (a) Open the TG mode
 - (b) Set the span to full span
 - (c) Set the Ref level to 0 dB
 - (d) Set the RBW and VBW to Auto
- 3. Press Peak to find the maximum value of the TG output, record the maximum value P1, check if P1 < TG level + 3dB
- Press Peak -> Search config -> Peak type ->min, to find the minimum value of the TG output, record the maximum value P2, check if P2 >TG level -3dB

TG level	P1	P1-TG level	Pass/Fail
0 dBm			
-10 dBm			
-20 dBm			
TG level	P2	P2-TG level	Pass/Fail
0 dBm			
-10 dBm			
-20 dBm			

Assembly Procedures

This chapter describes how to remove the major modules from the SVA1000X spectrum analyzer. To install the removed modules or replace new modules, please follow the corresponding operating steps in reverse order.

This chapter includes the following topics:

- Security Consideration which describes security information needed to consider while operating.
- List of Modules in which the modules to remove are listed.
- **Required Tools** which describes the tools needed to perform the procedures.
- **Disassembly Procedures** which describes in detail how to remove and install the modules.

Security Considerations

Only qualified personnel should perform the disassembly procedures. Whenever possible, disconnect the power before you begin to remove or replace the modules. Otherwise, possible personal injuries or damages to the components may occur.

Avoid Electrical Shock Hazardous voltages exist on the LCD module and power supply module. To avoid electrical shock, first, disconnect the power cord from the analyzers and then wait at least three minutes for the capacitors in the analyzers to discharge before you begin disassembly.

Preventing ESD Electrostatic discharge (ESD) can damage electronic components. When doing any of the procedures in this chapter, use proper ESD precautions. As a minimum, place the analyzers on a properly grounded ESD mat and wear a properly grounded ESD strap.

List of Modules

The following removable modules are listed in the order of performing disassembly procedures.

Table 4-1 List of modules

Number of Module	Module	
1	Rear Panel	
2	Front-Panel	
3	Rear Metal Cover	
4	Front Metal Cover	
5	Power Supply Module	
6	Main Boards	
8	Keyboard Module	
9	Display Module	

Required Tools

Use these tools to remove or replace the modules in the analyzers:

- Multifunctional screwdriver
- Antistatic gloves
- Custom screw hexagonal nut tool or long nose pliers

Disassembly Procedures

This section describes how to remove and install the modules listed above in the spectrum analyzer in detail. Complete disassembly will be best achieved through the following operating steps.

Removing the Rear Panel



Figure 4-1 Removing the Rear Panel Screws

Removal steps:

1. Remove each rear panel screws as shown in the figures above.

2. Press the place of the front panel as the arrows point in the first figure and remove the rear panel from the machine.

To install the rear metal cover, please perform these steps in reverse order.

Removing the Front Panel



Figure 4-2 Removing the front panel

Removal steps:

- 1. Place the analyzer face down on a soft surface such as an anti-static mat.
- 2. Remove the six screws located on the rear panel. In this same position, remove the four screws located on the standing legs..
- 3. Lift the rear panel up and off carefully.

To install the rear panel, please follow these same steps in reverse order.

Removing the Rear Metal Cover

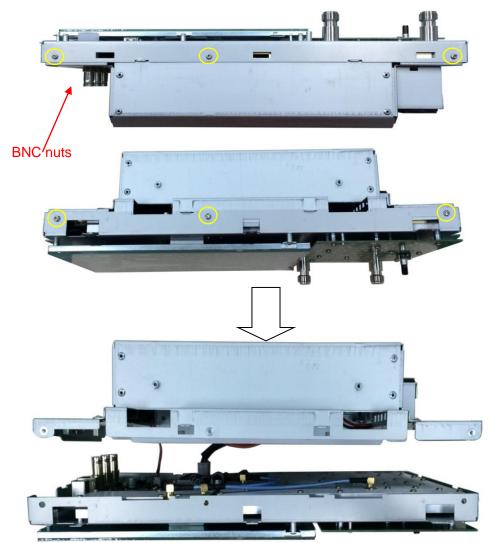


Figure 4-3 Removing the rear metal cover

Removal steps:

- 1. Place the analyzer down on a soft surface such as an anti-static mat.
- 2. Remove the screws located on the rear metal cover.
- 3. Remove three nuts from the Back BNC terminal.
- 4. Disconnect the power cable and fan cable connected to the mainboard module from the power supply module.
- 5. The edge of the rear metal cover is sharp, please lift the rear metal cover up and off carefully to avoid personal injury.

To install the rear metal cover, please perform these steps in reverse order.

Removing the Main Board, Channel Board



Figure 4-4 View of front panel subassembly with the mainboard

Removal steps:

- 1. Place the analyzer backside down on a soft surface such as an anti-static mat.
- 2. Remove the screws located on the metal shelf and each board.
- 3. Remove the RF board, TG board, Digital board from the metal shelf.

To install the front panel, please perform these steps in reverse order.

Removing the LCD, Keyboard



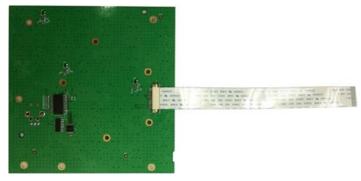


Figure 4-5 Removing the LCD and keyboard

Removal steps:

- 1. Remove the silicone keypad.
- 2. Remove the four screws located on the edge of the display module.
- 3. Remove the six screws located on the channel board.
- 4. Remove the seven screws located on the keyboard.
- 5. Disconnect the cable that connected the keyboard and the channel board.
- 6. Separate the modules carefully.

Contact SIGLENT

SIGLENT Technologies Co., Ltd

Address: 3/F, building NO.4, Antongda Industrial Zone, 3rd Liuxian Road, Bao'an District, Shenzhen, P.R.China Tel: 0086-755-3661 5186 E-mail: sales@siglent.com http://www.siglent.com

SIGLENT Technologies North America, Inc

Address: 6557 Cochran Rd Solon, Ohio 44139 Tel: 440-398-5800 Toll Free:877-515-5551 Fax: 440-399-1211 E-mail: <u>info@siglentna.com</u> http://<u>www.siglentna.com</u>

SIGLENT Technologies Europe GmbH

Staetzlinger Str. 70, 86165 Augsburg, Germany Tel: +49(0)-821-666 0 111 0 Fax: +49(0)-821-666 0 111 22 E-mail: <u>info-eu@siglent.com</u> Web: <u>www.siglenteu.com</u>